

**NOTICE:** When installing the Dolphin, immerse before switching on. Contact with water is absolutely necessary for proper cooling of the lamp!

### **DOLPHIN LAMP REPLACEMENT**

**TOOLS REQUIRED:**

- 5/16 or adjustable wrench
- Slotted screwdriver
- Sharp knife
- Silicone sealant

1. Carefully remove outer lens.
2. Being careful not to scratch the fixture's finish, use a sharp knife to remove the silicone sealant around the outer edge of the lamp.
3. Turn the fixture upside down; tap lightly if necessary. Lamp will fall loose.
4. With lamp contacts now exposed, unscrew lamp terminal screws and remove spade lugs.
5. Replace lamp. Place spade lugs under terminal screws and tighten screws.
6. Turn fixture over; carefully seat lamp in fixture.
7. Apply a bead of silicone sealant around the outer edge of lamp. To assure a water-tight seal, press sealant between lamp and fixture with finger. Allow silicone to dry before immersing.
8. Replace outer lens.

**NOTICE:** When installing the Dolphin, immerse before switching on. Contact with water is absolutely necessary for proper cooling of the lamp!

### **DOLPHIN LAMP REPLACEMENT**

**TOOLS REQUIRED:**

- 5/16 or adjustable wrench
- Slotted screwdriver
- Sharp knife
- Silicone sealant

1. Carefully remove outer lens.
2. Being careful not to scratch the fixture's finish, use a sharp knife to remove the silicone sealant around the outer edge of the lamp.
3. Turn the fixture upside down; tap lightly if necessary. Lamp will fall loose.
4. With lamp contacts now exposed, unscrew lamp terminal screws and remove spade lugs.
5. Replace lamp. Place spade lugs under terminal screws and tighten screws.
6. Turn fixture over; carefully seat lamp in fixture.
7. Apply a bead of silicone sealant around the outer edge of lamp. To assure a water-tight seal, press sealant between lamp and fixture with finger. Allow silicone to dry before immersing.
8. Replace outer lens.

**NOTICE:** When installing the Dolphin, immerse before switching on. Contact with water is absolutely necessary for proper cooling of the lamp!

### **DOLPHIN LAMP REPLACEMENT**

**TOOLS REQUIRED:**

- 5/16 or adjustable wrench
- Slotted screwdriver
- Sharp knife
- Silicone sealant

1. Carefully remove outer lens.
2. Being careful not to scratch the fixture's finish, use a sharp knife to remove the silicone sealant around the outer edge of the lamp.
3. Turn the fixture upside down; tap lightly if necessary. Lamp will fall loose.
4. With lamp contacts now exposed, unscrew lamp terminal screws and remove spade lugs.
5. Replace lamp. Place spade lugs under terminal screws and tighten screws.
6. Turn fixture over; carefully seat lamp in fixture.
7. Apply a bead of silicone sealant around the outer edge of lamp. To assure a water-tight seal, press sealant between lamp and fixture with finger. Allow silicone to dry before immersing.
8. Replace outer lens.

**NOTICE:** When installing the Dolphin, immerse before switching on. Contact with water is absolutely necessary for proper cooling of the lamp!

### **DOLPHIN LAMP REPLACEMENT**

**TOOLS REQUIRED:**

- 5/16 or adjustable wrench
- Slotted screwdriver
- Sharp knife
- Silicone sealant

1. Carefully remove outer lens.
2. Being careful not to scratch the fixture's finish, use a sharp knife to remove the silicone sealant around the outer edge of the lamp.
3. Turn the fixture upside down; tap lightly if necessary. Lamp will fall loose.
4. With lamp contacts now exposed, unscrew lamp terminal screws and remove spade lugs.
5. Replace lamp. Place spade lugs under terminal screws and tighten screws.
6. Turn fixture over; carefully seat lamp in fixture.
7. Apply a bead of silicone sealant around the outer edge of lamp. To assure a water-tight seal, press sealant between lamp and fixture with finger. Allow silicone to dry before immersing.
8. Replace outer lens.